

Samsung Galaxy Tab 4 nook

Quick Start Quick

On this tablet you will have access to a selection of pre-loaded Nook ebooks that you can start reading immediately. You will also have access to the following apps: Overdrive, hoopla, Smithsonian, Solitaire, Google Earth, Netflix, YouTube, DuoLingo, Chrome, Google Maps. You can add your Google account to access gMail, Drive, and other Google apps. You can also sign in or create an account with Overdrive or hoopla to access more digital content through the library. Access to Nook periodicals through Overdrive is not possible.

A number of apps such as the camera and Google Play Store have been disabled.

Setting a screen lock, adding a user, uninstalling apps, or factory resetting the device is prohibited. Please do not make changes to any of the device settings with the exception of accessibility settings.

Basic Functions

Charging the Battery

1. Connect the USB cable to the charging adapter.
2. Insert the USB cable into the tablet's USB/ Accessory port.
3. Plug the charging head into a standard AC power outlet until full charged.

Turn Your Device On and Off

- To turn on your device, press and hold the Power/Lock key for a few seconds until the logo appears.
- To turn off your device, press and hold the Power/Lock key and follow the prompts.


Locking and Unlocking Your Device

By default, the device screen locks when the backlight turns off.

To unlock your device from the lock screen:

- With your device turned on, press the Power/Lock button to wake the display. Then slide your finger across the screen in any direction.

To lock your device screen:

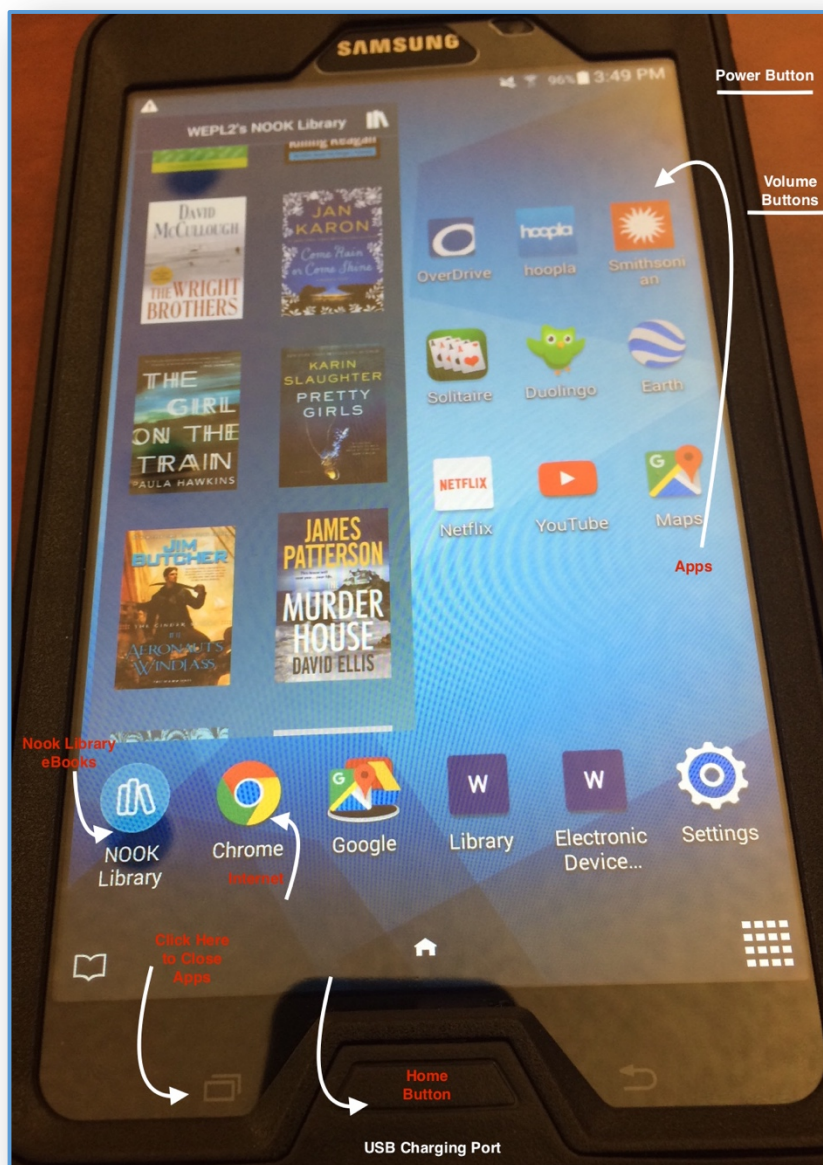

- Press the Power/Lock button. The screen goes black.

Connecting to a Wi-Fi Network

1. From the Home screen, click on the Setting App. In settings, click on the Connections tab → Wi-Fi.
2. Make sure the Wi-Fi is turned on.
3. Select the desired network under Wi-Fi networks. Enter a password if applicable and tap Connect.

Internet

1. From the Home screen, tap Chrome.
2. Type the website address in the URL field and then tap Go.

Navigation

- Go back: Tap the left facing arrow.
- Go forward: Tap the right facing arrow.
- Zoom in or out while browsing: Double tap or pinch in or out.

Start Reading

You'll find all the pre-loaded Nook ebooks, in your Nook library.

1. From the home screen, tap Nook Library icon (in the bottom left side of the screen).
2. Tap a cover of the book to open it.

Changing the Text Size in a Nook Book

1. Open a Nook book
2. Tap the center of the screen to bring up reading tools.
3. Tap on the font icon (Aa) at the top of the screen.
4. Select your preferred text size, font style, line spacing, background color and other customizable options for your best possible reading experience.

Google Account

Adding a Google Account

1. From the Home screen tap Settings → General tab → Accounts.
2. Tap + Add account → Google and follow the prompts to complete setup.

Overdrive App

You can access thousands of ebooks & audiobooks with your library card through the Overdrive app.

- If you already have an Overdrive account, sign in with your account information.
- If you do not have an Overdrive account, follow the on screen prompts and create an account with your library card number.
- Add Clevnet as your library.
- To learn more go here: <http://help.overdrive.com/customer/en/portal/articles/1481622>

Hoopla App

You can access music, movies, tv shows, graphic novels, ebooks & ebooks with your library card through the hoopla app.

- If you already have a hoopla account, sign in with your account information.
- If you do not have a hoops account, follow the on screen prompts and create an account with your library card number.